


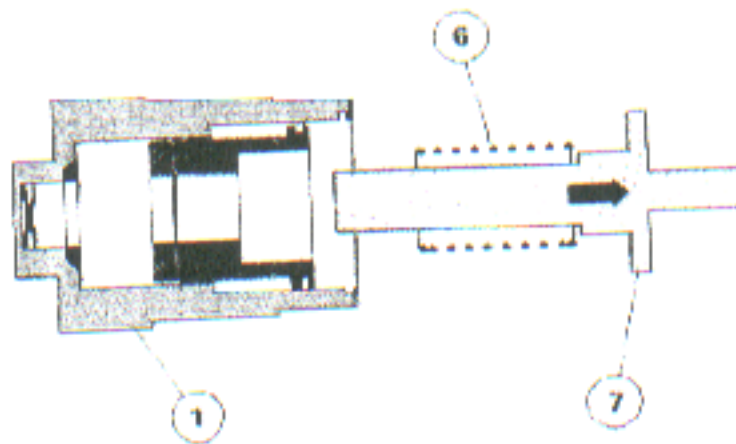

NOTE The support 7 no longer fits completely into the casing 1, but stops when the rear plane of the flanges projects about 3 mm from the rear end of the casing.

Fig. 3



- Blow through with an air jet (arrow A-Fig. 4) into the centre opening of support 7 until the piston 5 is expelled from the casing 1. Remove the disc 4 and the two thrust springs 2 from the casing 1.

Fig. 4

